



external SD card

Reset CS0 GND 3.3V CS1  
SCL1 MISO CLK MOSI CD

LCD and Encoder

GND LCD RS LCD 4 LCD 6 BEEP ENC B  
5V LCD EN LCD 5 LCD 7 ENC P ENCA